

# LUBRICATION CHART

LUBRICATION CHART

NO.	UNIT	NO. OF PLACES	LUBRICANT	TOTAL CAPACITY	CHECK PERIODS	REMARKS
1	Engine	1	Petroleum Base Detergent Oil - 10W-30	5 qts.	Daily	Drain and refill every 2000 miles
2	Transmission - Automatic	1	Type A - Suffix A Transmission Fluid	12 qts.	Every 1000 miles	Drain and refill every 20,000 miles
3	Differential - Except Powr-Lok	1	E. P. Hypoid Gear Lube - SAE #90	3 lbs.	Every 1000 miles	Change every 15,000 miles
3A	Differential - Powr-Lok	1	Lubricant of the API-GL-4 Type Incorporating Additives Suitable for Use in the Powr-Lok Differential	3 lbs.	Every 1000 miles	Change every 15,000 miles
4	Steering Gear	1	E. P. Hypoid Gear Lube - SAE #90	12 oz.	Every 2000 miles	Oil plug in housing cover
5	Power Steering Pump	1	Type A - Suffix A Transmission Fluid	2 qts.	Every 2000 miles	Drain and refill every 15,000 miles
6	Wheel Bearing - Front	2	Rust Inhibited - Lithium Base, All Purpose Grease	Ea. 1/4 lb. approx.	Every 10,000 miles	Remove wheel, clean and re-pack
7	Wheel Bearing - Rear	2	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 10,000 miles	Pressure fitting, do not over-load
8	Universal	3	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Pressure fittings
9	Slip Joint - Propeller Shaft	1	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Pressure fitting
10	Bearing - Clutch Throwout (St'd)	1	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Pressure fitting - through hole in pan underneath
11	Cross Shaft - Clutch Throwout (St'd)	1	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Pressure fitting
12	Steering Knuckle Ball Joint	4	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Relieve load and swing wheels while lubricating
13	Air Cleaner	1	Engine Oil - 10W	As Req'd	Every 2000 miles	Wash in kerosene and re-oil
14	Gear Shifter	1	Lubriplate #630-AA or Equivalent	As Req'd	Every 2000 miles	Apply to shifter tabs on steering column
15	Steering Linkage	5	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Pressure fittings
16	Clutch Throwout Yoke (St'd)	1	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	On ball through side openings
17	Oil Breather Cap	1	Engine Oil	As Req'd	Every 2000 miles	Wash in kerosene and re-oil

# Lubrication Chart

LUBRICATION CHART (Continued)

NO.	UNIT	NO. OF PLACES	LUBRICANT	TOTAL CAPACITY	CHECK PERIODS	REMARKS
18	Distributor Rotor - Felt	1	Engine Oil	2 or 3 drops	Every 2000 miles	Oil sparingly
19	Transmission - Standard	1	Mineral Base Gear Oil - SAE 90 Winter - 140 Summer	2-1/2 lbs	Every 2000 miles	Change every 15,000 miles
20	Parking Brake Lever	1	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Spread on slide plate
21	Generator	2	Engine Oil	Few drops	Every 2000 miles	Oil cup on each end - with oil can
22	Distributor	1	Engine Oil	Few drops	Every 2000 miles	Oil cup on side - with oil can
23	Master Cylinder	1	Brake Fluid - SAE 70 R3 - Specification	1/4" from top	Every 2000 miles	Under hood
	Parking Brake Cables	2	Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	Every 2000 miles	Where cables enter housings with brush
	Master - Vac Power Brake Unit	1	Vacuum Cylinder Oil	1 oz	Every 20,000 miles	Pull rubber boot back and squirt with oil can in front of filter
	Exhaust Manifold, Heat Control Valve (L-Head Engine)	1	Liquid Graphite	As Req'd	Every 5000 miles	Lubricate shaft end
	Starter Motor Bendix Drive	1	Engine Oil	As Req'd	Every 2000 miles	Lubricate through hole in housing with oil can
	Windshield Wiper Linkages	4	Light Penetrating Oil	As Req'd	Twice yearly	With oil can
	Window Regulators		Rust Inhibited - Lithium Base, All Purpose Grease	As Req'd	After servicing	Apply to moving parts
	Air Conditioner Compressor	1	Refrigeration Oil - 300W	As Req'd	Twice yearly	CAUTION - Drain system of refrigerant before removing filler plug; recharge system after filling
	Miscellaneous Hinges, Accel. Pins, Brake and Clutch Control Pins, etc.		Machine Oil	Few drops	Every 2000 miles	With oil can
	Hood Hinges, Deck Lid Hinges, Hood Lock, Deck Lid Lock		Lubriplate	As Req'd	Every 5000 miles	Apply to moving parts
	Door Locks and Striker Plates		Door Lock Lubricant	As Req'd	Every 2000 miles	Spread by rubbing

# Lubrication Chart

