


LUBRICATION

GROUP XV

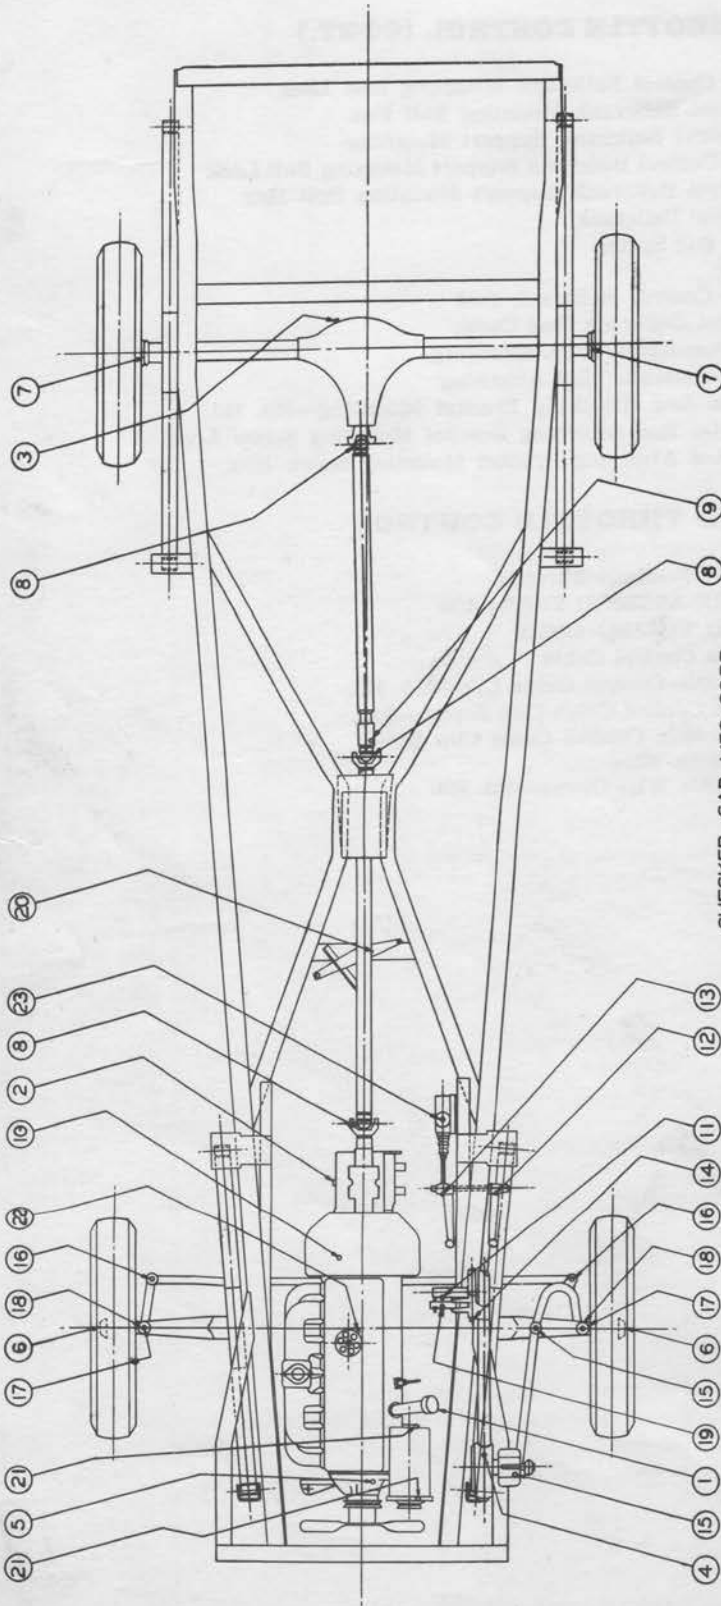

CHECKER CAB MFG. CORP.
KALAMAZOO, MICH.
MODEL A-4

LUBRICATION CHART

NO.	UNIT	NO. OF OILS	LUBRICANT	TO BE CHECKED PERIODICALLY	REMARKS
1	ENGINE	1	SAE 30 MOTOR OIL	EVERY 1000 MILES	CHANGE WHEN DIRTY
2	TRANSMISSION	1	SAE 90 GLYPHOLIC OIL	EVERY 1000 MILES	CHANGE WHEN DIRTY
3	DIFFERENTIAL	1	SAE 90 GLYPHOLIC OIL	EVERY 1000 MILES	CHANGE WHEN DIRTY
4	MASTER CYLINDER	1	HYDRAULIC FLUID	EVERY 1000 MILES	CHANGE WHEN DIRTY
5	SLIP SHOE	2	SLIP SHOE GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
6	WHEEL BEARING - FRONT	2	WHEEL BEARING GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
7	WHEEL BEARING - REAR	2	WHEEL BEARING GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
8	SLIP SHOE - FRONT	2	SLIP SHOE GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
9	SLIP SHOE - REAR	2	SLIP SHOE GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
10	BRASSING CLUTCH THROTTLE	1	BRASSING GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
11	CLUTCH	1	CLUTCH GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
12	PEDAL - CLUTCH	1	PEDAL GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
13	PEDAL - BRAKE	1	PEDAL GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
14	DRAG LINK	2	DRAG LINK GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
15	TIE ROD	2	TIE ROD GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
16	SHOCK	2	SHOCK GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
17	STRUT	2	STRUT GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
18	STEERING KNUCKLE	2	STEERING KNUCKLE GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
19	GEAR SHIFT BELEBRANK	1	GEAR SHIFT BELEBRANK GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
20	BRASSING BRAKE LEVER	1	BRASSING GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
21	BRASSING BRAKE LEVER	1	BRASSING GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY
22	MASTER CYLINDER	1	HYDRAULIC FLUID	EVERY 1000 MILES	CHANGE WHEN DIRTY
23	SLIP SHOE	2	SLIP SHOE GREASE	EVERY 1000 MILES	REPLACE WHEN DIRTY

* THIS SHOULD BE A NEAR APPROXIMATE CALCULATION OF BRUSHING ROAD GREASE WITH A MELTING POINT OF 100 DEGREES F.