



TABLE OF CONTENTS

	Page
GROUP 1—FRAME - SUSPENSION	
SPECIFICATIONS	1
ILLUSTRATION	2
PARTS LIST	3
GROUP 2—FRONT AXLE	
SPECIFICATIONS	7
ILLUSTRATION	9
PARTS LIST	10
GROUP 3—REAR AXLE	
SPECIFICATIONS AND INSTRUCTIONS	11
ILLUSTRATION	15
PARTS LIST	16
GROUP 4—BRAKES - SERVICE & EMERGENCY	
SPECIFICATIONS AND INSTRUCTIONS	18
ILLUSTRATIONS	
FRONT BRAKES	20
REAR BRAKES	22
MASTER CYLINDER	24
PARTS LIST	21
GROUP 5—WHEELS - HUBS - DRUMS	
ILLUSTRATIONS	
DRUMS SHOWN IN GROUP 2 & 3 ILLUSTRATION	9-15
PARTS LIST	28
GROUP 6—STEERING & SHIFT	
INSTRUCTIONS	29
ILLUSTRATION	31
PARTS LIST	32
GROUP 7—ENGINE & MOUNTING	
SPECIFICATIONS	35
ILLUSTRATIONS	
EXTERNAL VIEW	37
INTERNAL VIEW	38
WATER PUMP	46
PARTS LIST	39
GROUP 8—CLUTCH & CLUTCH CONTROLS	
INSTRUCTIONS	47
ILLUSTRATION	51
PARTS LIST	52
GROUP 9—TRANSMISSION	
SPECIFICATIONS	55
ILLUSTRATION	54
PARTS LIST	55



TABLE OF CONTENTS

	Page
GROUP 10—PROPELLER SHAFT	
INSTRUCTIONS	57
ILLUSTRATION	58
PARTS LIST	59
GROUP 11—COOLING & HEATING	
INSTRUCTIONS	60
ILLUSTRATION	61
PARTS LIST	62
GROUP 12—EXHAUST	
ILLUSTRATION	64
PARTS LIST	65
GROUP 13—ELECTRICAL	
SPECIFICATIONS AND INSTRUCTIONS.....	66
ILLUSTRATIONS	
WIRING DIAGRAM	67
DISTRIBUTOR	74
STARTER	79
GENERATOR	85
PARTS LIST	75-80-86
GROUP 14—FUEL SYSTEM	
INSTRUCTIONS	95
ILLUSTRATIONS	
FUEL PUMP	94
CARBURETOR	99
FLOAT LEVEL	98
PARTS LIST	93
GROUP 15—LUBRICATION	
ILLUSTRATION	104
GROUP 16—BODY	
ILLUSTRATIONS	
ROOF AND WINDSHIELD OPENING.....	109
FRONT DOOR ASSEMBLY	112
REAR DOOR ASSEMBLY	114
SIDE FRAME ASSEMBLY	132
FRONT INTERIOR	145
PARTS LIST	105