



## TABLE OF CONTENTS

	Page
<b>GROUP 1—FRAME - SUSPENSION</b>	
SPECIFICATIONS .....	1
ILLUSTRATION .....	2
PARTS LIST .....	3
<b>GROUP 2—FRONT AXLE</b>	
SPECIFICATIONS .....	7
ILLUSTRATION .....	9
PARTS LIST .....	10
<b>GROUP 3—REAR AXLE</b>	
SPECIFICATIONS AND INSTRUCTIONS .....	11
ILLUSTRATION .....	15
PARTS LIST .....	16
<b>GROUP 4—BRAKES - SERVICE &amp; EMERGENCY</b>	
SPECIFICATIONS AND INSTRUCTIONS .....	18
ILLUSTRATIONS	
FRONT BRAKES .....	20
REAR BRAKES .....	22
MASTER CYLINDER .....	24
PARTS LIST .....	21
<b>GROUP 5—WHEELS - HUBS - DRUMS</b>	
ILLUSTRATIONS	
DRUMS SHOWN IN GROUP 2 & 3 ILLUSTRATION .....	9-15
PARTS LIST .....	28
<b>GROUP 6—STEERING &amp; SHIFT</b>	
INSTRUCTIONS .....	29
ILLUSTRATION .....	31
PARTS LIST .....	32
<b>GROUP 7—ENGINE &amp; MOUNTING</b>	
SPECIFICATIONS .....	35
ILLUSTRATIONS	
EXTERNAL VIEW .....	37
INTERNAL VIEW .....	38
WATER PUMP .....	46
PARTS LIST .....	39
<b>GROUP 8—CLUTCH &amp; CLUTCH CONTROLS</b>	
INSTRUCTIONS .....	47
ILLUSTRATION .....	51
PARTS LIST .....	52
<b>GROUP 9—TRANSMISSION</b>	
SPECIFICATIONS .....	55
ILLUSTRATION .....	54
PARTS LIST .....	55



## TABLE OF CONTENTS

	Page
<b>GROUP 10—PROPELLER SHAFT</b>	
INSTRUCTIONS .....	57
ILLUSTRATION .....	58
PARTS LIST .....	59
<b>GROUP 11—COOLING &amp; HEATING</b>	
INSTRUCTIONS .....	60
ILLUSTRATION .....	61
PARTS LIST .....	62
<b>GROUP 12—EXHAUST</b>	
ILLUSTRATION .....	64
PARTS LIST .....	65
<b>GROUP 13—ELECTRICAL</b>	
SPECIFICATIONS AND INSTRUCTIONS.....	66
ILLUSTRATIONS	
WIRING DIAGRAM .....	67
DISTRIBUTOR .....	74
STARTER .....	79
GENERATOR .....	85
PARTS LIST .....	75-80-86
<b>GROUP 14—FUEL SYSTEM</b>	
INSTRUCTIONS .....	95
ILLUSTRATIONS	
FUEL PUMP .....	94
CARBURETOR .....	99
FLOAT LEVEL .....	98
PARTS LIST .....	93
<b>GROUP 15—LUBRICATION</b>	
ILLUSTRATION .....	104
<b>GROUP 16—BODY</b>	
ILLUSTRATIONS	
ROOF AND WINDSHIELD OPENING.....	109
FRONT DOOR ASSEMBLY .....	112
REAR DOOR ASSEMBLY .....	114
SIDE FRAME ASSEMBLY .....	132
FRONT INTERIOR .....	145
PARTS LIST .....	105