

FRONT AND REAR BUMPER ASSEMBLY

**STABILIZER BAR**  
ILLUSTRATION NO. 3

ILLUS. PART  
KEY NO.

DESCRIPTION

ALL	1	2	3	4	5
M O D E L S	A 11	A 12 W	A 12	A 11 E	A 12 E


STABILIZER BAR

- 3-1 92474 BOLT - Lower Control R.H. & L.H. Arms to Stabilizer Bar
- 3-2 92146 WASHER - Stabilizer Bar Bolt Top & Bottom Bushing Retaining
- 3-3 92145 BUSHING - Stabilizer Bar Bolt
- 3-4 92146 WASHER - Stabilizer Bar Bolt Top & Bottom Bushing Retaining
- 3-5 92473 SPACER - Stabilizer Bar Bolt
- 3-6 92146 WASHER - Stabilizer Bar Bolt Top & Bottom Bushing Retaining
- 3-7 92145 BUSHING - Stabilizer Bar Bolt
- 3-8 701013 BAR ASSY. - Stabilizer
- 3-9 N.S.S. BAR - Stabilizer
- 3-10 94446 BUSHING - Stabilizer Bar
- 3-11 92475 BRACKET - Stabilizer Bar to Frame
- 3-12 186417 LOCKWASHER - Stabilizer Bar Brkt. to Frame (3/8")
- 3-13 180122 BOLT - Stabilizer Bar to Frame (3/8" - 16 x 1" Hex. Hd.)
- 3-14 92147 WASHER - Stabilizer Bar Bolt Lower Bushing Centering Retaining
- 3-15 92145 BUSHING - Stabilizer Bar Bolt
- 3-16 92148 WASHER - Stabilizer Bar Bolt Lower Bushing Retaining
- 3-17 442828 NUT - Stabilizer Bar Bolt (3/8" - 24 Hex. Lock Type)

UPPER CONTROL ARM AND STEERING KNUCKLE

- 4-1 92434 ARM ASSY. - Upper Control R.H. & L.H.
- 4-2 124944 NUT - Upper Control Arm to Shaft (5/8" - 18 Hex. Jam)
- 4-3 121574 LOCKWASHER - Upper Control Arm to Shaft (5/8)
- 4-4 92263 WASHER - Upper Control Arm Bushing Compression Rear
- 4-5 92302 BUSHING - Upper Control Arm Rear
- 4-6 92288 SHAFT - Upper Control Arm
- 4-7 92282 ARM - Upper Control
- 4-8 92265 WASHER - Upper Control Arm Bushing Compression Inner
- 4-9 92301 BUSHING - Upper Control Arm Front
- 4-11 121574 LOCKWASHER - Upper Control Arm to Shaft (5/8")
- 4-12 124944 NUT - Upper Control Arm to Shaft (5/8" - 18 Hex. Jam)

UPPER CONTROL ARM AND STEERING KNUCKLE  
ILLUSTRATION NO. 4

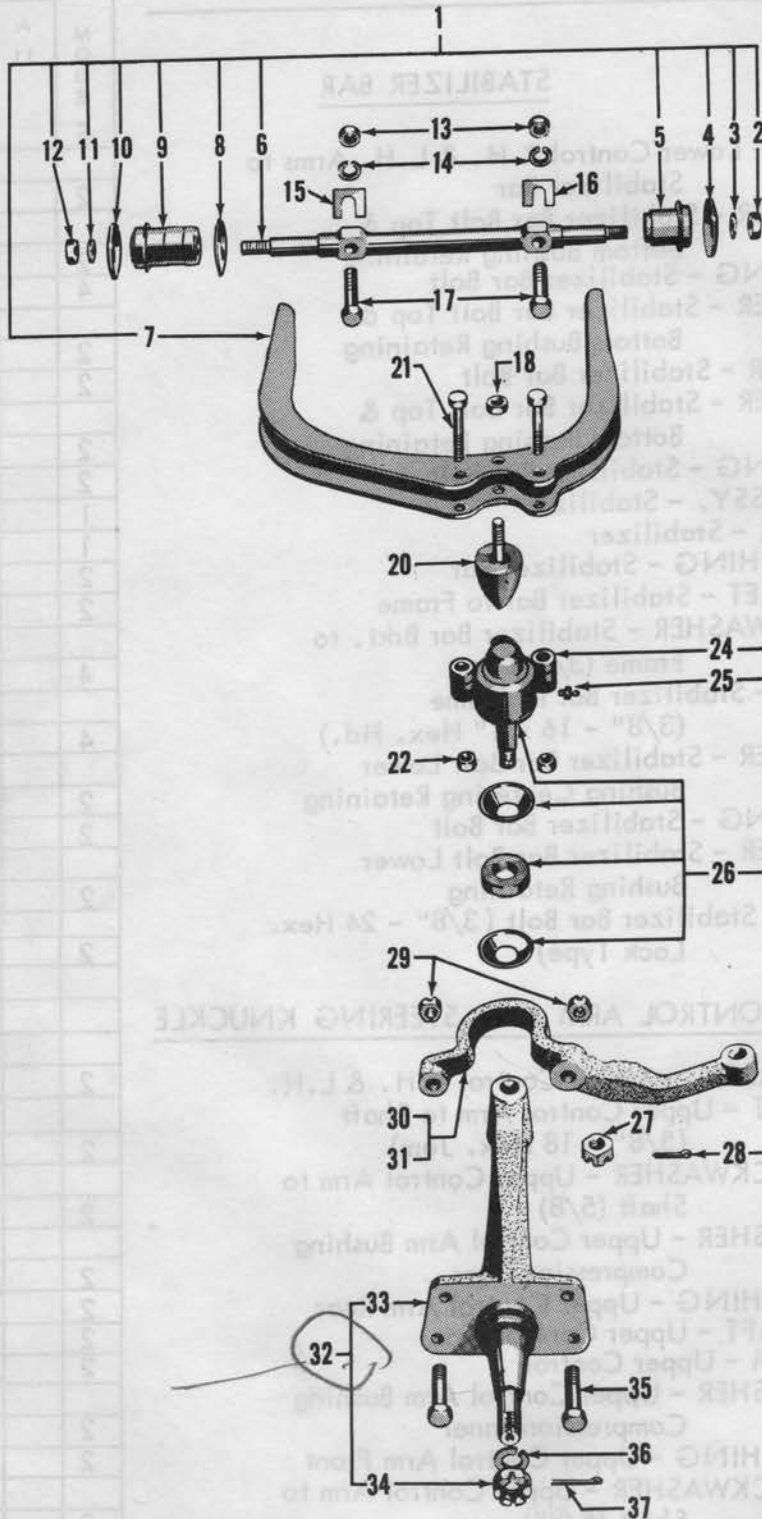

UPPER CONTROL ARM AND STEERING KNUCKLE  
ILLUSTRATION NO. 4

ILLUS. KEY	PART NO.	DESCRIPTION	ALL	1	2	3	4	5
			M O D E L S	A 11	A 12 W	A 12	A 11 E	A 12 E
<u>UPPER CONTROL ARM AND STEERING KNUCKLE (Cont'd)</u>								
4-13	120371	NUT - Upper Control Arm Shaft to Frame (1/2" - 20 Hex.)	4					
4-14	131101	LOCKWASHER - Upper Control Arm Shaft to Frame (1/2")	4					
4-15	92270	SHIM - Upper Control Arm Front Suspension Adjusting (.03")	AR					
4-16	92271	SHIM - Upper Control Arm Front Suspension Adjusting (.12")	AR					
4-17	181709	BOLT - Upper Control Arm Shaft to Frame (1/2" - 20 x 2-1/2 Hex. Hd.)	4					
4-18	274643	NUT - Upper Control Arm to Bumper & Socket Assy. (3/8" - 24 Hex. Lock)	2					
4-20	92289	BUMPER - Upper Control Arm	2					
4-21	181648	BOLT - Upper Control Arm to Socket Assy. (3/8" - 24 x 2 Hex. Hd.)	4					
4-22	274643	NUT - Upper Control Arm to Socket Assy. Lock (3/8" - 24 Hex.)	4					
4-23	92305	SOCKET ASSY. - Upper Control Arm	2					
4-24	N.S.S.	SOCKET SUB ASSY. - Upper Control Arm	2					
4-25	110347	FITTING - Socket Assy. Lubrication	2					
4-26	64165	COVER ASSY. - Socket Assy. Dust	2					
4-27	64168	NUT - Socket Assy. to Steering Knuckle (9/16 - 18 Sltd. Hd.)	2					
4-28	103385	COTTER PIN - Socket Assy. to Steering Knuckle (1/8" x 1")	2					
4-29	96290	NUT - Steering Arm to Steering Knuckle (1/2" - 20)	4					
	186425	LOCKWASHER - Steering Arm to Steering Knuckle (1/2")	4					
4-30	94400	ARM - Steering Knuckle R.H.	1					
4-31	94399	ARM - Steering Knuckle L.H.	1					
4-32	94349	KNUCKLE AND NUT ASSY. - Steering	2					
4-33	N.S.S.	KNUCKLE - Steering	2					
4-34	98120	NUT - Steering Knuckle Spindle	2					
4-35	181707	BOLT - Steering Arm to Steering Knuckle (1/2" - 20 x 2-1/4" Hex. Hd.)	4					
4-36	70285	WASHER - Steering Knuckle Spindle	2					
4-37	103385	COTTER PIN - Steering Knuckle Spindle (1/8" x 1")	2					
	181637	BOLT - Backing Plate to Steering Knuckle (3/8" - 24 x 1" Hex. Hd.)	4					
	186417	LOCKWASHER - Backing Plate to Steering Knuckle (3/8")	4					
	120369	NUT - Backing Plate to Steering Knuckle (3/8" - 24 Hex.)	4					

ILLUS. KEY	PART NO.	DESCRIPTION	ALL	1	2	3	4	5
<b>SHOCK ABSORBER, COIL SPRING AND LOWER CONTROL ARM</b>								
			MODELS	A	A	A	A	A
				11	12	12	11	12
					W		E	E
5-1	442828	NUT - Shock Absorber Mtg. (3/8" - 24 Hex.)	2					
5-3	94408	WASHER - Shock Absorber Mtg. Outer Retaining	2					
5-4	94407	INSULATOR - Shock Absorber Mtg. Upper	4					
5-5	93959	SHOCK ABSORBER ASSY. - Front	2					
	95092	SHOCK ABSORBER ASSY. - Front (Heavy Duty)	2					
5-7	94409	WASHER - Shock Absorber Mtg. Inner Retaining	4					
5-8	92293	INSULATOR - Front Spring	2					
5-9	92292	SPRING - Front Coil - V-8 Eng.	2					
	702327	SPRING - Front Coil - 6 Cyl.	2					
5-10	94407	INSULATOR - Shock Absorber Mtg. Lower	2					
5-11	92294	PLATE - Shock Absorber Mtg.	2					
5-12	186414	LOCKWASHER - Shock Absorber Plate to Lower Control Arm (5/16")	4					
5-13	181608	BOLT - Shock Absorber Plate to Lower Control Arm (5/16" - 24 x 1")	4					
5-14	94407	INSULATOR - Shock Absorber Mtg. Lower	2					
5-15	94408	WASHER - Shock Absorber Mtg. Outer Retaining	2					
5-16	442828	NUT - Shock Absorber Mtg. (8/8" - 24 Hex.)	2					
5-18	124944	NUT - Lower Control Arm to Crossmember (5/8" - 18 Hex. Jam)	8					
5-19	92263	WASHER - Lower Control Arm to Crossmember Bushing Compression Center	4					
5-20	92436	ARM AND BUSHING ASSY. - Lower Control R.H.	1					
5-21	92437	ARM AND BUSHING ASSY. - Lower Control L.H.	1					
5-22	92513	SPACER - Lower Control Arm Bushing	2					
5-23	92258	BUSHING - Lower Control Arm Front	2					
5-24	92311	BUSHING - Lower Control Arm Rear	2					
5-25	N.S.S.	ARM - Lower Control R.H.	1					
5-26	N.S.S.	ARM - Lower Control L.H.	1					
5-27	92261	BOLT - Lower Control Arm to Crossmember	4					
5-28	92273	SHIM - Lower Control Arm to Crossmember	AR					
5-29	92264	WASHER - Lower Control Arm to Crossmember Bushing Compression Inner	4					
5-30	93355	WASHER - Lower Control to Crossmember Floating	2					
5-31	92290	BUMPER - Lower Control Arm R.H.	1					
5-32	92291	BUMPER - Lower Control Arm L.H.	1					
5-33	181707	BOLT - Lower Control Arm to Socket (1/2" - 20 x 2-1/4" Hex. Hd.)	4					
5-34	186417	LOCKWASHER - Lower Control Arm to Bumper (3/8")	2					
5-35	120369	NUT - Lower Control Arm to Bumper (3/8" - 24 Hex.)	2					
5-36	186425	LOCKWASHER - Lower Control Arm to Socket (1/2")	4					
5-37	96290	NUT - Lower Control Arm to Socket (1/2" x 20 Hex.)	4					
5-38	92306	SOCKET ASSY. - Lower Control Arm	2					
5-39	108637	COTTER PIN - Socket to Strg. Knuckle (5/32" x 1-1/8")	2					
5-40	64167	NUT - Socket to Steering Knuckle (5/8" - '8 Slotted Hex.)	2					
5-41	64164	COVER ASSY. - Socket Dust.	2					
5-42	N.S.S.	SOCKET SUB-ASSY. - Lower Control Arm	2					
5-43	110347	FITTING - Socket Lubrication	2					