



**OIL COOLING SYSTEM and RADIATOR INSTALLATION  
(USE WITH AUTOMATIC TRANSMISSION)**

ILLUSTRATION No. 27



**COOLING SYSTEM and RADIATOR INSTALLATION (cont'd)  
(USE WITH STANDARD TRANSMISSION)**

Illus. Key	Part No.	Description	No. Req'd.
26-4	92453	CAP AND CHAIN ASSEMBLY - Radiator Filler Neck	1
26-5	92454	CAP ASSEMBLY - Radiator Filler Neck 4 Lbs Pressure	1
26-6	80641	CHAIN ASSEMBLY - Radiator Filler Neck	1
26-7	80642	CLAMP - Radiator Filler Neck Cap And Chain Assembly	1
26-8	138473	WASHER - Radiator Filler Neck Clamp To Cap And Chain Assembly Lock	1
26-9	134532	NUT - Radiator Filler Neck Clamp To Cap And Chain Assembly Screw	1
26-10	129028	SCREW - Radiator Filler Neck Clamp To Cap And Chain Assembly	1
26-11	144112	ELBOW - Radiator Drain Cock	1
26-12	81583	DRAIN COCK - Radiator	1
26-13	115703	BOLT - Fan Blade To Engine	4
26-14	116120	WASHER - Fan Blade To Engine Bolt Lock	4
26-15	80047	BLADE ASSEMBLY - Engine Fan	1
26-16	92664	BELT - Fan And Generator Drive	1
26-17	24690	CLAMP ASSEMBLY - Radiator Water Inlet Hose	2
26-18	92444	HOSE - Radiator Water Inlet	1
26-19	24690	CLAMP ASSEMBLY - Water Pump Water Inlet Hose	2
26-20	92913	HOSE - Water Pump Water Inlet	1
26-21	* 80697	TUBE - Radiator Water Outlet	1
26-22	24690	CLAMP ASSEMBLY - Radiator Water Outlet Hose	2
26-23	80088	HOSE - Radiator Water Outlet	1



### OIL COOLING SYSTEM and RADIATOR INSTALLATION (USE WITH AUTOMATIC TRANSMISSION)

Illus. Key	Part No.	Description	No. Req'd.
27-1	92438	CORE ASSEMBLY - Oil Cooler And Radiator	1
27-2	119860	BOLT - Radiator Assembly To Support	6
27-3	178515	WASHER - Radiator Assembly To Support Lock	6
27-4	92453	CAP AND CHAIN ASSEMBLY - Radiator Filler Neck	1
27-5	92454	CAP ASSEMBLY - Radiator Filler Neck 4 Lbs Pressure	1
27-6	80641	CHAIN ASSEMBLY - Radiator Filler Neck	1
27-7	80642	CLAMP - Radiator Filler Neck Cap And Chain Assembly	1
27-8	138473	WASHER - Radiator Filler Neck Clamp To Cap And Chain Assembly Lock	1
27-9	134532	NUT - Radiator Filler Neck Clamp To Cap And Chain Assembly Screw	1
27-10	129028	SCREW - Radiator Filler Neck Clamp To Cap And Chain Assembly	1
27-11	144112	ELBOW - Radiator Drain Cock	1
27-12	81583	DRAIN COCK - Radiator	1
27-13	115703	BOLT - Fan Blade To Engine	4
27-14	116120	WASHER - Fan Blade To Engine Bolt Lock	4
27-15	80047	BLADE ASSEMBLY - Engine Fan	1
27-16	92664	BELT - Fan And Generator Drive	1
27-17	24690	CLAMP ASSEMBLY - Radiator Water Inlet Hose	2
27-18	92444	HOSE - Radiator Water Inlet	1
27-19	24690	CLAMP ASSEMBLY - Water Pump Water Inlet Hose	2
27-20	92913	HOSE - Water Pump Water Inlet	1
27-21	80697	TUBE - Radiator Water Outlet	1



### OIL COOLING SYSTEM and RADIATOR INSTALLATION (cont'd) (USE WITH AUTOMATIC TRANSMISSION)

Illus. Key	Part No.	Description	No. Req'd.
27-22	24690	CLAMP ASSEMBLY - Radiator Water Outlet Hose	2
27-23	80088	HOSE - Radiator Water Outlet	1
27-24	92726	HOSE ASSEMBLY - Oil Cooler Tube to Radiator Oil Cooler Pressure	1
27-25	92729	TUBE ASSEMBLY - Transmission to Oil Cooler Connecting Hose Pressure	1
27-26	140777	CLIP - Transmission Oil Cooler Tube	1
27-27	92732	SUPPORT - Transmission Oil Cooler Tube Clip Support	1
27-28	118772	BOLT - Transmission Oil Cooler Tube Clip Support	1
27-29	116120	WASHER - Transmission Oil Cooler Tube Clip Support Bolt Lock	1
27-30	118774	WASHER - Transmission Oil Cooler Tube Clip Support Bolt Plain	1
27-31	115729	NUT - Transmission Oil Cooler Tube Clip Support Bolt	1
27-32	92752	ELBOW - Oil Cooler Tube To Transmission Nipple	1
27-33	120286	NIPPLE - Oil Cooler Tube Elbow To Transmission	1
27-34	92727	HOSE ASSEMBLY - Radiator Oil Cooler to Oil Cooler Tube Return	1
27-35	92730	TUBE ASSEMBLY - Oil Cooler Hose to Transmission Return	1
27-36	120050	BOLT - Transmission Oil Cooler Tube Clip	2
27-37	118774	WASHER - Transmission Oil Cooler Tube Clip Bolt Plain	2
27-38	116120	WASHER - Transmission Oil Cooler Tube Clip Bolt Lock	2
27-39	140777	CLIP - Transmission Oil Cooler Tube	4
27-40	92752	ELBOW - Oil Cooler Tube To Transmission Nipple	1
27-41	120286	NIPPLE - Oil Cooler Tube To Transmission	1